

TABLET OF CONTENTS

PREFACE	
Precautions
Safety Precautions
Electric Shock Warning
Notice
Conventions Used in This Manual
CHAPTER 1 INTRODUCTION
1.1 Names of Parts
Front panel
Display
How to use keys
1.2 I/O Configuration and Main Functions
I/O configuration
Main functions
1.3 How Setup Levels Are Configured and Operating the Keys on the Front Panel
Selecting parameters
Fixing settings
1.4 Communications Function
CHAPTER 2 PREPARATIONS
2.1 Installation
Dimensions
Panel cutout
Setting up the option units
Mounting
2.2 Wiring Terminals
Terminal arrangement
Precautions when wiring
Wiring
CHAPTER 3 BASIC OPERATION
3.1 Initial Setup Examples
3.2 Setting the Input Type
Input type
3.3 Selecting _C/_F
Temperature unit
3.4 Selecting PID Control or ON/OFF Control
3.5 Setting Output Specifications
Control period
Direct/reverse operation
3.6 Setting the SP

- Changing the SP
- 3.7 Executing ON/OFF Control
 - ON/OFF Control
 - Setup
- 3.8 Determining PID Constants (AT, ST, manual setup)
 - AT. (auto-tuning)
 - ST (self-tuning)
 - ST start conditions
 - ST stable range
 - Manual setup
- 3.9 Alarm Outputs
 - Alarm type
 - Alarm value
- 3.10 Heater Burnout Alarm (HBA)
 - HBA detection
 - Operating conditions
 - Setup
 - How to calculate detection current values
 - Example

CHAPTER 4 APPLIED OPERATION

- 4.1 Shifting Input Values
 - Shifting input
 - How to calculate input shift values (2-point shift)
 - 1-point shift method
 - 2-point shift method
 - Example of 2-point temperature input shift
- 4.2 Alarm Hysteresis
 - Standby sequence
 - Close in alarm/open in alarm
- 4.3 Setting Scaling Upper and Lower Limits (analog input)
 - Analog input
- 4.4 Executing Heating and Cooling Control
 - Heating and cooling control
 - Setup
- 4.5 Externally Setting the SP
 - Setting event input
 - How to use multi-SP
 - Setting by key operation
 - Setup
 - Executing run/stop control
- 4.6 Setting the SP Upper and Lower Limit Values
 - Set point limiter
 - Setup
- 4.7 Executing the SP Ramp Function (limiting the SP change rate)
 - SP ramp
- 4.8 To Move to the Advanced Function Setting Level
- 4.9 Using the Key Protect Level
 - Key protect

CHAPTER 5 PARAMETERS

Conventions Used in this Chapter
 Meanings of icons used in this chapter
 About parameter display
 About the Order in Which Parameters Are Described in This Chapter
 Protect Level
 Operation Level
 Adjustment Level
 Adjustment Level
 Initial Setting Level
 Advanced Function Setting Level
 Advanced Function Setting Level

CHAPTER 6 CALIBRATION

6.1 Parameter Structure
 6.2 User Calibration
 6.3 Calibrating Thermocouples
 6.4 Calibrating Analog Input
 6.5 Calibrating Platinum Resistance Thermometers
 6.6 Checking Indication Accuracy

APPENDIX .

SPECIFICATIONS
 Ratings
 Characteristics
 CURRENT TRANSFORMER (CT)
 ERROR DISPLAY
 PARAMETER OPERATIONS LIST
 Operation level
 Adjustment level
 Initial Setting Level
 Advanced function setting level
 Protect level
 Communications Setting Level
 SENSOR INPUT SETTING RANGES
 SETUP LEVELS DIAGRAM
 PARAMETER FLOW