

TABLE OF CONTENTS

Preface	
Conventions Used in This Manual	
Meanings of Abbreviations	
How to Read Display Symbols	
“Reference” mark	
How This Manual is Organized	
Precautions on Safety	
CHAPTER 1 INTRODUCTION	
This chapter introduces the names of parts on the E5EK-T and their functions.	
For details on how to use the controller and parameter settings, see Chapter 2 onwards.	
1.1 Names of parts	
Main parts	
Front panel	
About the displays	
How to use keys	
1.2 Input and Output	
Input	
Output	
1.3 Program	
How programs are structured	
Program operation	
Alarm output	
Program output	
1.4 Parameters and Menus	
Parameter types	
Selecting modes	
Selecting parameters	
Fixing settings	
1.5 About the Communications Function	
1.6 About Calibration	
CHAPTER 2 PREPARATIONS	
This chapter describes the operations (e.g. setup, installation and wiring) you should carry out before turning the E5EK-T ON.	
2.1 Setup	
Draw-out	
Setting up the output unit	
Setting up the option unit	
2.2 Installation	
Dimensions	
Panel cutout	
Mounting	
2.3 Wiring Terminals	
Terminal arrangement	

Precautions when wiring	
Wiring	
CHAPTER 3 BASIC OPERATION	
This chapter describes actual examples for understanding the basic operation of the E5EK-T.	
3.1 Convention Used in this Chapter	
3.2 Setting Input Specifications	
Input type	
Temperature input	
Analog input	
3.3 Setting Output Specifications	
Output assignments	
Direct/reverse operation	
Control period	
3.4 Setting Alarm Type	
Alarm type	
Alarm value	
Alarm hysteresis	
Close in alarm/open in alarm	
3.5 Setting Patterns	
Pattern No.	
Number of steps	
Step SP/Step time	
Alarm value	
3.6 Protect Mode	
Security	
Key protect	
3.7 Starting and Stopping Operation	
3.8 Adjusting Control Operation	
Changing programs	
Manual operation	
Auto-tuning (A.T.)	
CHAPTER 4 APPLIED OPERATION	
This chapter describes each of the parameters required for making full use of the features of the E5EK-T. Read this chapter while referring to the parameter descriptions in chapter 5.	
4.1 Selecting the Control Method	
Heating and cooling control	
Position-proportional control	
ON/OFF control	
4.2 Operating Condition Restrictions	
Manipulated variable restrictions	
Set point limiter	
4.3 Ramp Rise Rate Setup Program	
Running the ramp rise rate setup program	
Program example	
4.4 Program Operation	

	Hold/advance
	Pattern operation
4.5	Wait Operation
4.6	Program output
	Time signal
	Program status
4.7	Setting Running Conditions
	Operation at power ON
	Starting the program run
	End condition
4.8	How to Use Event Input
	Input assignments
	Detailed description of input functions
4.9	How to Use the Heater Burnout Alarm
	Heater burnout detection
	Operating conditions
	How to calculate the heater burnout set value
4.10	LBA
4.11	How to Use Transfer Output
CHAPTER 5 PARAMETERS	
	This chapter describes the parameters of the E5EK-T. Use this chapter as a reference guide.
	Conventions Used in this Chapter
	The meaning of icons used in this chapter
	About parameter display
	About the Order in Which Parameters Described in This Chapter
	Protect Mode
	Manual Mode
	Level 0 Mode
	Program Mode
	Level 1 Mode
	Level 2 Mode
	Setup Mode
	Expansion Mode
	Option Mode
	Calibration Mode
CHAPTER 6 USING THE COMMUNICATIONS FUNCTION .	
	This chapter mainly describes communications with a host computer and communications commands.
6.1	Outline of the Communications Function
	Outline
	Transfer procedure
	Interface
6.2	Preparing for Communications
	Cable connections
	Setting the communications specifications
6.3	Command Structure
6.4	Commands and Responses

	Reading/writing parameters
	Issuing special commands
	Reading/writing program parameters
6.5	How to Read Communications Error Information
	End code
	Undefined error
6.6	Program Example
	How to use programs
	Program list (language: IBM PC Compatible Machine)
	Examples of use
CHAPTER 7 CALIBRATION	
	This chapter describes procedures for each calibration operation. Read this chapter only when the controller must be calibrated.
7.1	Parameter Structure
7.2	Calibrating Thermocouples
7.3	Calibrating Platinum Resistance Thermometers
7.4	Calibrating Current Input
7.5	Calibrating Voltage Input
7.6	Checking Indication Accuracy
	Checking indication accuracy
CHAPTER 8 TROUBLESHOOTING	
	This chapter describes how to find out and remedy the cause if the E5EK-T does not function properly. Remedy E5EK-T trouble in the order of the descriptions in this chapter
8.1	Initial Checks
8.2	How to Use the Error Display
8.3	How to Use the Error Output
8.4	Checking Operation Restrictions
	AppEndix
SPECIFICATIONS	
	Ratings
	Characteristics
	Sensor Input Setting Ranges and Indication Ranges
	Output Unit Ratings and Characteristics
	Option Unit Ratings and Characteristics
ABOUT CURRENT TRANSFORMER (CT)	
CONTROL BLOCK DIAGRAM	
	Standard type
	Position-proportional type
SETTING LIST	
MODEL LIST	
PARAMETER OPERATIONS LIST	
ASCII CODE LIST	