

TABLE OF CONTENTS

PRECAUTIONS

- 1 Safety Precautions
- 2 General Precautions

SECTION 1

The Auto Menu Mode

- 1-1 Features
- 1-2 Overview of F150 Installation and Operation ...
- 1-3 Documentation Conventions

SECTION 2

Basic Operations

- 2-1 Starting and Quitting
- 2-1-1 Starting
- 2-1-2 Operating Modes
- 2-1-3 Quitting
- 2-2 Input Devices
- 2-2-1 Console
- 2-2-2 RS-232C
- 2-3 Screen Displays
- 2-4 Menu Tree

SECTION 3

Operating Procedure

- 3-1 Overview
- 3-2 Displaying Images
- 3-3 Registering Images
- 3-3-1 Manual Registration
- 3-3-2 Using the STEP Signal
- 3-4 Setting Measurement Conditions
- 3-5 Checking Measurements
- 3-6 Measuring Objects

SECTION 4

Optional Functions

- 4-1 Changing Scenes
- 4-1-1 Moving to the Basic Screen
- 4-1-2 Changing Scenes
- 4-2 System Menu

TABLE OF CONTENTS

4-2-1	System Menu
4-2-2	Saving/Loading System and Scene Data
4-2-3	Saving/Loading Image Data
4-2-4	Images Stored in Memory
4-2-5	Image Storage Setting
4-2-6	Displaying Stored Images
4-2-7	Using Measurement Images as Sample Images
4-2-8	Startup Scene and Mode
4-2-9	Checking the Software Version

SECTION 5

Terminal Blocks

5-1	I/O Formats
5-1-1	Inputs
5-1-2	Outputs
5-2	Terminal Signal Operation and Timing
5-2-1	No Handshaking
5-2-2	Using Handshaking
5-3	Communications Settings

SECTION 6

RS-232C Communications Settings ..

6-1	Communications Settings
6-2	RS-232C Input Keys

SECTION 7

Troubleshooting

Revision History

