

TABLE OF CONTENTS

PRECAUTIONS

- 1 Safety Precautions
- 2 General Precautions

SECTION 1

Before Installing

- 1-1 Installation Precautions
- 1-1-1 F150 Components
- 1-1-2 Installation Site
- 1-1-3 Installation
- 1-1-4 Cables
- 1-1-5 Camera
- 1-1-6 Video Monitor
- 1-2 Confirming Package Contents
- 1-3 Product Availability

SECTION 2

Product Introduction

- 2-1 Overview of F150 Application
- 2-2 Component Names and Functions
- 2-3 Connections
- 2-4 Power Supply and Ground
- 2-4-1 Crimp Terminals and Cables
- 2-4-2 Protective Conductor (Earth) Wiring
- 2-4-3 Wiring the Power Supply
- 2-5 Cameras
- 2-6 CCTV Lens
- 2-6-1 Optical Chart
- 2-6-2 Lens
- 2-6-3 Extension Tubes
- 2-7 Lighting
- 2-7-1 Lighting Methods
- 2-8 Mounting the Controller
- 2-8-1 Mounting to DIN Track
- 2-8-2 Mounting on a Flat Surface

SECTION 3

Terminal Blocks

- 3-1 Terminal Block Application

TABLE OF CONTENTS

3-2	Crimp Terminals and Cables
3-3	Specifications
3-4	Terminals

SECTION 4

RS-232C Connection

4-1	RS-232C Port Application
4-2	Connector
4-3	Wiring
4-4	Connection

SECTION 5

Troubleshooting

5-1	Connection Errors
5-2	Errors during Menu Operation
5-3	Terminal Block Errors
5-4	RS-232C Communications Errors

SECTION 6

Maintenance

6-1	Maintenance Parts and Replacement
6-2	Regular Inspections

SECTION 7

Specifications

7-1	F150-C10E Vision Mate Controller
7-2	K150-KP Console
7-3	Cameras
7-4	F150-LE20/50 Lens
7-5	F150-LT10 Light
7-6	Cables
7-7	F300-M09 Video Monitor

Revision History