

TABLE OF CONTENTS

PRECAUTIONS
1 Safety Precautions
2 General Precautions
SECTION 1	
The Auto Menu Mode
1-1 Features
1-2 Overview of F150-2 Installation and Operation	..
1-3 Input and Output
1-4 Data Compatibility
SECTION 2	
Basic Operation
2-1 Starting and Quitting
2-1-1 Starting
2-1-2 Quitting
2-2 Input Devices
2-2-1 Console
2-2-2 RS-232C
2-3 Screen Displays
2-4 Menu Tree
SECTION 3	
Operating Procedure
3-1 Overview
3-2 Displaying Images
3-3 Registering Images
3-4 Setting Measurement Conditions
3-5 Checking Measurements
3-6 Measuring Objects
3-7 Optional Functions
3-7-1 Optional Functions Menu
3-7-2 Image Adjustment
3-7-3 Position Compensation ON/OFF
3-7-4 Drawing Measurement Region
3-8 Changing Scenes
3-9 System Settings
3-9-1 System Menu
3-9-2 Saving/Loading System and Scene Data
3-9-3 Measurement Screen Settings
3-9-4 Switching Menus

TABLE OF CONTENTS

- 3-9-5 Startup Scene and Mode
- 3-9-6 Selecting Output Method for Error Terminal ..
- 3-9-7 Checking the Software Version
- 3-10 Saving to Flash Memory

SECTION 4

Terminal Block

- 4-1 I/O Formats
- 4-1-1 Inputs
- 4-1-2 Outputs
- 4-2 Terminal Signal Operation and Timing
- 4-2-1 No Handshaking
- 4-2-2 Using Handshaking (F150-C10E-2, F150-C15E-2)
- 4-3 Communications Settings

SECTION 5

CompoBus/D Settings

- 5-1 Communications Settings
- 5-1-1 Communications Settings
- 5-1-2 Confirming CompoBus/D Communications Settings
- 5-2 Input Format
- 5-3 Output Format
- 5-3-1 Control Output (Word +0)
- 5-3-2 Judgement Output (+1)
- 5-3-3 F150-2 Status Output (+2)
- 5-4 Timing Charts
- 5-4-1 Basic Mode
- 5-5 Allocation Charts

SECTION 6

RS-232C Communications Settings ..

SECTION 7

Troubleshooting

Revision History