



# TABLE OF CONTENTS

## **PRECAUTIONS .....**

- 1 Safety Precautions .....
- 2 General Precautions .....

## **SECTION 1**

### **The Expert Menu Mode .....**

- 1-1 Features .....
- 1-2 Measurement Methods .....
- 1-3 Menu Tree .....
- 1-4 Overview of F150 Installation and Operation .....
- 1-5 Input and Output .....

## **SECTION 2**

### **Basic Operations .....**

- 2-1 Starting and Quitting .....
- 2-2 Menu Operations .....
- 2-3 Two-camera Unit .....
- 2-4 Intelligent Light Source .....

## **SECTION 3**

### **Setting Measurement Conditions .....**

- 3-1 Entering Set Mode .....
- 3-2 Adjusting Images .....
- 3-3 Position Displacement Compensation .....
- 3-4 Drawing Measurement Regions and Setting Evaluation Criteria .....
- 3-5 Output Expressions .....
- 3-6 Scenes .....
- 3-7 Initializing Measurement Conditions (Clearing Scenes) .....

## **SECTION 4**

### **Monitor Mode and Run Mode .....**

- 4-1 Confirming Correct Operation .....
- 4-2 Run Mode .....



# TABLE OF CONTENTS

## SECTION 5

### **System Settings** .....

- 5-1 Entering System Mode .....
- 5-2 Measurement Result Output Destinations .....
- 5-3 Two-camera Unit and Intelligent Light Source .....
- 5-4 Measurement Screen Settings .....
- 5-5 Storing Measured Images .....
- 5-6 Changing Console Key Allocations .....
- 5-7 Setting Startup Conditions .....
- 5-8 Selecting Output Method for Error Terminal .....
- 5-9 Checking the Software Version .....

## SECTION 6

### **Backing Up Data** .....

- 6-1 Saving/Loading System and Scene Data .....
- 6-2 Saving to Flash Memory .....

## SECTION 7

### **Terminal Block** .....

- 7-1 Communications Settings .....
- 7-2 I/O Formats .....
- 7-3 Terminal Signal Operation and Timing .....

## SECTION 8

### **RS-232C Normal Settings** .....

- 8-1 Communications Settings .....
- 8-2 Command List .....
- 8-3 Input Format .....
- 8-4 Input Commands .....
- 8-5 Measurement Results Output Format .....

## SECTION 9

### **RS-232C Host Link Settings** .....

- 9-1 Communications Settings .....
- 9-2 Command Tables .....
- 9-3 Input Format .....
- 9-4 Output Format .....
- 9-5 Sample Ladder Program .....



# TABLE OF CONTENTS

## SECTION 10

### CompoBus/D Settings .....

- 10-1 Communications Settings .....
- 10-2 Input Format .....
- 10-3 Output Format .....
- 10-4 Timing Charts .....
- 10-5 Allocation Charts .....
- 10-6 Sample Ladder Program .....

## SECTION 11

### RS-232C Menu Operation Settings .....

## SECTION 12

### Troubleshooting .....

## Appendices

- A Version Information .....

## Index .....

## Revision History .....