

TABLE OF CONTENTS

SECTION 1

Basic Operating Procedures. 1-(1)

1-1	Using this Manual	1-(2)
1-2	Operational Flow	1-(3)
1-3	Installing the Application Software	1-(4)
1-4	Displaying Images and Focussing	1-(10)
1-5	Menu Operations	1-(12)
1-6	Basic Operations	1-(28)
1-7	Run Mode	1-(62)
1-8	Saving Settings and Shutting Down	1-(64)

SECTION 2

Processing Items Setting Procedures 2-(1)

2-1	Inputting Camera Images.	2-1-(1)
2-2	Switching Cameras	2-2-(1)
2-3	Changing Filtering.	2-3-(1)
2-4	Filtering Again.	2-4-(1)
2-5	Binary Position Compensation	2-5-(1)
2-6	EC Position Compensation	2-6-(1)
2-7	Edge Position Compensation.	2-7-(1)
2-8	Model Position Compensation.	2-8-(1)
2-9	Circle Position Compensation	2-9-(1)
2-10	Reset Scroll	2-10-(1)
2-11	Scroll	2-11-(1)
2-12	Detecting Binary Defects.	2-12-(1)
2-13	Classification	2-13-(1)
2-14	Density Defects	2-14-(1)
2-15	EC Defect.	2-15-(1)
2-16	EC Positioning	2-16-(1)
2-17	Edge Position.	2-17-(1)
2-18	Fine Matching	2-18-(1)
2-19	EC Circle Count.	2-19-(1)
2-20	Pattern	2-20-(1)
2-21	QUEST Character Verification	2-21-(1)
2-22	Rotation Positioning	2-22-(1)
2-23	ECM Search.	2-23-(1)
2-24	Lot Number OCV 1	2-24-(1)
2-25	Labeling	2-25-(1)
2-26	Label Data	2-26-(1)

TABLE OF CONTENTS

2-27	Edge Pitch	2-27-(1)
2-28	Density Data	2-28-(1)
2-29	Calculation	2-29-(1)
2-30	Elapsed Time	2-30-(1)
2-31	Get Unit Data	2-31-(1)
2-32	Wait	2-32-(1)
2-33	Set Unit Data	2-33-(1)
2-34	Trend Monitor	2-34-(1)
2-35	Conditional Branching	2-35-(1)
2-36	DI Branch	2-36-(1)
2-37	End	2-37-(1)
2-38	Memory Card Data	2-38-(1)
2-39	DO Data	2-39-(1)
2-40	DO Judgement	2-40-(1)
2-41	Host Link Data	2-41-(1)
2-42	Normal Data	2-42-(1)
2-43	Display String	2-43-(1)
2-44	Display Measurement	2-44-(1)
2-45	Display Judgement	2-45-(1)
2-46	Display Item	2-46-(1)
2-47	Display Time	2-47-(1)
2-48	Display Figure	2-48-(1)
2-49	Display Line, Display Box, Display Circle, and Display Cursor	2-49-(1)

SECTION 3

Monitor Mode and Run Mode **3-(1)**

3-1	Testing Measurements	3-(2)
3-2	Starting Measurement	3-(5)

SECTION 4

Other Functions **4-(1)**

4-1	Changing Scenes and Scene Groups	4-(2)
4-2	Backing Up Data	4-(9)
4-3	Clearing Measurement Values	4-(24)
4-4	Checking Image Density Distribution: Line Brightness	4-(25)
4-5	Checking I/O Status with External Devices	4-(28)
4-6	Memory Card Operations	4-(33)

TABLE OF CONTENTS

SECTION 5

System Settings 5-(1)

5-1	Entering System Mode	5-(2)
5-2	Camera Settings	5-(3)
5-3	Screen Display and Monitor	5-(5)
5-4	Customizing Operations	5-(17)
5-5	Setting Conditions for Saving Measurement Images	5-(27)
5-6	Using BUSY Signals	5-(31)
5-7	Setting Startup Conditions	5-(33)
5-8	Setting the Calendar Date and Time (Date/Time)	5-(34)
5-9	Checking System Information	5-(35)

SECTION 6

Communicating with External Devices. 6-(1)

6-1	Parallel Interface	6-1-(1)
6-2	Normal Serial Interface	6-2-(1)
6-3	Host Link Serial Interface	6-3-(1)
6-4	Serial Interface Menu Operations	6-4-(1)

SECTION 7

Appendices. 7-(1)

7-1	Set Up Menu	7-(2)
7-2	Troubleshooting	7-(4)
7-3	FAQ	7-(9)
7-4	Terminology	7-(12)
7-5	Character Codes	7-(15)
7-6	Menu Hierarchy	7-(16)

Revision History