

TABLE OF CONTENTS

PRECAUTIONS

- 1 General Precautions
- 2 Safety Precautions
- 3 Application Precautions
- 4 Noise Prevention

SECTION 1

Introduction

- 1-1 Features
- 1-2 Front of the Meter
- 1-3 Rear of the Meter
- 1-4 Modes
- 1-5 Communications Function

SECTION 2

Setup

- 2-1 Mounting
- 2-2 Input Block

 - 2-2-1 Terminal Arrangement
 - 2-2-2 Wiring Precautions
 - 2-2-3 Wiring

- 2-3 Output Board

 - 2-3-1 Terminal Arrangement
 - 2-3-2 Relay Output Board
 - 2-3-3 Transistor and Combination Output Board
 - 2-3-4 Linear Output Board
 - 2-3-5 BCD Output Board

SECTION 3

Parameter Setting

- 3-1 Overview

 - 3-1-1 Heading Symbols
 - 3-1-2 Setting Procedures

- 3-2 Setting Mode

 - 3-2-1 Selecting Setting Mode
 - 3-2-2 Menu Overview
 - 3-2-3 Setting Value Menu (sUset)

 - Bank No. of Set Value
 - OUT1 Set Value
 - OUT2 Set Value
 - OUT3 Set Value
 - OUT4 Set Value
 - OUT5 Set Value

 - 3-2-4 Prescaling Menu (pscl)

 - Prescaling Bank
 - Prescaling Value X (Mantissa) of Input A
 - Prescaling Value Y (Exponent) of Input A
 - Decimal Point Position

 - 3-2-5 Setup Menu (setup)

 - Input Mode
 - Sensor Type
 - Communications Unit Number

TABLE OF CONTENTS

- Baud Rate
- Word Length
- Stop Bits
- Parity Bits
- 3-2-6 Option Menu (opt)
- Power Failure Memory
- Compensation Value
- Compensation Input Condition
- Output Modes
- Upper Limit (H) of Linear Output Range
- Lower Limit (L) of Linear Output Range
- Remote/Local Programming
- 3-3 Protect Mode
- 3-3-1 Selecting Protect Mode
- 3-3-2 Menu Overview
- 3-3-3 Protect Menu (prot)
- All Key Protect
- Setting Value Change Prohibit
- Reset Prohibit
- Security

SECTION 4

Operations in RUN Mode

- 4-1 Displaying and Changing Setting Values
- 4-1-1 Displaying Setting Values
- 4-1-2 Changing Setting Values
- 4-2 External Input Signals
- 4-2-1 Bank Selection
- 4-2-2 RESET/COMPENSATION

SECTION 5

Useful Functions

- 5-1 Teaching Function
- 5-1-1 Set Value
- 5-1-2 Prescaling Value
- 5-1-3 Linear Output Range
- 5-2 Output Test
- 5-3 Maintenance Mode
- 5-3-1 Maintenance Mode
- 5-3-2 Initialization

SECTION 6

BCD Output

- 6-1 Connectors
- 6-2 Timing Charts

SECTION 7

Troubleshooting

- 7-1 Items to Be Checked First
- 7-2 Display
- 7-2-1 Flashing
- 7-2-2 Error Message

TABLE OF CONTENTS

Appendices

A Specifications	
B List of Settings	
C Available Models	
D Available Parameters	
E Setting Examples	

Revision History	
-------------------------------	--

