

# TABLE OF CONTENTS

<b>PRECAUTIONS</b> .....	
1 General Precautions .....	
2 Safety Precautions .....	
3 Application Precautions .....	
4 Noise Prevention .....	

## **SECTION 1** **CompoWay/F Communications Procedures** .....

1-1 Introduction .....	
1-2 Preparation For Operation .....	
1-2-1 Wiring .....	
1-2-2 Communications Parameters .....	
1-3 Data Format .....	
1-4 Commands and Responses .....	
1-4-1 Memory Area Read .....	
1-4-2 Command Text Composition .....	
1-4-3 Memory Area Write .....	
1-4-4 Parameter Area Read .....	
1-4-5 Parameter Area Write .....	
1-4-6 Properties Read .....	
1-4-7 Controller Status Read .....	
1-4-8 Internode Echo Test .....	
1-4-9 Operating Command .....	
1-4-10 Summary of Response Codes .....	
1-5 Memory/Parameter Area Details .....	
1-6 Restricting Communications Access .....	
1-7 Command Lists .....	
1-7-1 Read Command Lists .....	
1-7-2 Write Command Lists .....	
1-8 Communications Program Example .....	

## **SECTION 2** **Host Link Communications** .....

2-1 Interface Specifications .....	
2-1-1 RS-232C (25-pin) .....	
2-1-2 RS-232C (9-pin) .....	
2-1-3 RS-422 .....	
2-1-4 RS-485 .....	
t2-2 Before Applying Power .....	
2-3 General RS-232C/RS-422/RS-485 Specifications .....	
2-4 Communications and Error Control .....	
2-4-1 Communications Control Procedures .....	
2-4-2 Block Format .....	
2-4-3 Error Control .....	
2-5 Commands and Responses .....	
2-5-1 Command/Response Format Data .....	
2-5-2 Command List .....	
2-6 Reset Control (Maximum/Minimum Value Reset) .....	
2-7 Set Value Write (K3NX/K3NV/K3NH Communication/Comparative Output) .....	
2-8 Set Value Write (K3NR/K3NP/K3NC Communication/Comparative Output) .....	
2-9 Set Value Read (K3NX/K3NV/K3NH Communication/Comparative Output) .....	
2-10 Set Value Read (K3NR/K3NP/K3NC Communication/Comparative Output) .....	



# TABLE OF CONTENTS

2-11	Maximum/Minimum Read	.....
2-12	Display Value (PV Value) Read	.....
2-13	Model Data Read	.....
2-14	Test	.....
2-15	Undefined Command Error	.....
2-16	End Code List	.....
2-17	Communication Program Example	.....
2-17-1	Program Example of RS-232C Communication	.....
2-17-2	Operation Example	.....

## SECTION 3

### BCD Communications .....

3-1	Connecting BCD Outputs	.....
3-2	Setting before Power Application	.....
3-3	Operations: Front Key Section	.....
3-4	BCD Programs	.....
3-5	Program Example 1: Connection to a PC	.....
3-5-1	Explanation of Operation	.....
3-5-2	I/O Allocation in Use	.....
3-5-3	DM (Data Memory) Area	.....
3-5-4	Ladder Program	.....
3-5-5	Timing Chart	.....
3-6	Program Example 2: Connection to a PC	.....
3-6-1	Explanation of Operation	.....
3-6-2	I/O Allocation in Use	.....
3-6-3	DM (Data Memory) Area	.....
3-6-4	Ladder Program	.....
3-6-5	Timing Chart	.....

## Appendices

A	ASCII List	.....
B	List of Optional Accessories	.....

## Revision History .....

C	About this Manual:	.....
---	--------------------	-------

