

# TABLE OF CONTENTS

<b>PRECAUTIONS</b>	.....
1 General Precautions	.....
2 Safety Precautions	.....
3 Application Precautions	.....
4 Noise Prevention	.....
<b>SECTION 1</b>	
<b>Introduction</b>	.....
1-1 Features	.....
1-2 Front of the Meter	.....
1-3 Rear of the Meter	.....
1-4 Modes	.....
1-5 Communications Function	.....
1-6 Field Calibration	.....
<b>SECTION 2</b>	
<b>Setup</b>	.....
2-1 Mounting	.....
2-2 Input Block	.....
2-2-1 Terminal Arrangement	.....
2-2-2 Wiring Precautions	.....
2-2-3 Wiring	.....
2-3 Output Board	.....
2-3-1 Terminal Arrangement	.....
2-3-2 Relay Output Board	.....
2-3-3 Transistor and Combination Output Board	.....
2-3-4 Linear Output Board	.....
2-3-5 BCD Output Board	.....
<b>SECTION 3</b>	
<b>Parameter Setting</b>	.....
3-1 Overview	.....
3-1-1 Heading Symbols	.....
3-1-2 Setting Procedures	.....
3-2 Setting Mode	.....
3-2-1 Selecting Setting Mode	.....
3-2-2 Menu Overview	.....
3-2-3 Setting Value Menu (sUset)	.....
HH Set Value	.....
H Set Value	.....
L Set Value	.....
LL Set Value	.....
3-2-4 Setup Menu (setup)	.....
Input Type	.....
Temperature Unit	.....
Scaling Upper Limit Value	.....
Scaling Lower Limit Value	.....
Decimal Point Position	.....
Communications Unit Number	.....
Baud Rate	.....
Word Length	.....
Stop Bits	.....

# TABLE OF CONTENTS

- Parity Bits .....
- 3-2-5 Option Menu (opt) .....
- Average Processing .....
- Display Digit Change .....
- Upper-limit Compensation Value .....
- Lower-limit Compensation Value .....
- Hysteresis .....
- Comparative Output Pattern .....
- Standby Sequence .....
- Upper Limit (H) of Linear Output Range .....
- Lower Limit (L) of Linear Output Range .....
- Remote/Local Programming .....
- 3-3 Protect Mode .....
- 3-3-1 Selecting Protect Mode .....
- 3-3-2 Menu Overview .....
- 3-3-3 Protect Menu (prot) .....
- All Key Protect .....
- Setting Value Change Prohibit .....
- Maximum/Minimum Value Clear Prohibit .....
- Security .....

## SECTION 4

### Operations in RUN Mode .....

- 4-1 Displaying and Changing Setting Values .....
- 4-1-1 Displaying Setting Values .....
- 4-1-2 Changing Setting Values .....
- 4-2 Displaying and Resetting of Maximum and Minimum Values .....
- 4-2-1 Displaying Maximum and Minimum Values .....
- 4-2-2 Resetting Maximum and Minimum Values .....
- 4-3 External Input Signals .....
- 4-3-1 RESET .....
- 4-3-2 HOLD .....

## SECTION 5

### Useful Functions .....

- 5-1 Teaching Function .....
- 5-1-1 Set Value .....
- 5-1-2 Linear Output Range .....
- 5-2 Output Test .....
- 5-3 Maintenance Mode .....
- 5-3-1 Maintenance Mode .....
- 5-3-2 Initialization .....
- 5-3-3 Field Calibration .....
- 5-3-4 Thermocouple Calibration .....
- 5-3-5 Temperature-resistance Thermometer Calibration .....
- 5-3-6 Current Input Calibration .....
- 5-3-7 Voltage Input Calibration .....

## SECTION 6

### BCD Output .....

- 6-1 Connectors .....
- 6-2 Timing Charts .....

# TABLE OF CONTENTS

## SECTION 7

### Troubleshooting .....

- 7-1 Items to Be Checked First .....
- 7-2 Display .....
- 7-2-1 Flashing .....
- 7-2-2 Error Message .....

### Appendices

- A Specifications .....
- B Available Models .....
- C List of Settings .....
- D Available Parameters .....

### Revision History .....