

TABLE OF CONTENTS

- PRECAUTIONS**
- 1 General Precautions
- 2 Safety Precautions
- 3 Application Precautions
- 4 Noise Prevention
- SECTION 1**
- Introduction**
- 1-1 Features
- 1-2 Front of the Meter
- 1-3 Rear of the Meter
- 1-4 Modes
- 1-5 Communications Function
- 1-6 Field Calibration
- SECTION 2**
- Setup**
- 2-1 Mounting
- 2-2 Base Unit
- 2-2-1 Terminal Arrangement
- 2-2-2 Wiring Precautions
- 2-2-3 Wiring
- 2-3 Output Board
- 2-3-1 Terminal Arrangement
- 2-3-2 Relay Output Board
- 2-3-3 Transistor and Combination Output Board
- 2-3-4 Linear Output Board
- 2-3-5 BCD Output Board
- SECTION 3**
- Parameter Setting**
- 3-1 Overview
- 3-1-1 Heading Symbols
- 3-1-2 Setting Procedures
- 3-2 Setting Mode
- 3-2-1 Selecting Setting Mode
- 3-2-2 Menu Overview
- 3-2-3 Setting Value Menu (sUset)
- HH Set Value
- H Set Value
- L Set Value
- LL Set Value
- 3-2-4 Scaling Menu (scale)
- Input Value 2
- Display Value 2
- Input Value 1
- Display Value 1
- Decimal Point Position
- 3-2-5 Setup Menu (setup)
- Input Range
- Power Supply Frequency
- Communications Unit Number

TABLE OF CONTENTS

- Baud Rate
- Word Length
- Stop Bits
- Parity Bits
- 3-2-6 Option Menu (opt)
- Average Processing
- Startup Compensation Time
- Hysteresis
- Comparative Output Pattern
- Upper Limit (H) of Linear Output Range
- Lower Limit (L) of Linear Output Range
- Remote/Local Programming
- 3-3 Protect Mode
- 3-3-1 Selecting Protect Mode
- 3-3-2 Menu Overview
- 3-3-3 Protect Menu (prot)
- All Key Protect
- Setting Value Change Prohibit
- Forced-zero Prohibit
- Maximum/Minimum Value Clear Prohibit
- Security

SECTION 4

Operations in RUN Mode

- 4-1 Forced-zero
- 4-2 Displaying and Changing Setting Values
- 4-2-1 Displaying Setting Values
- 4-2-2 Changing Setting Values
- 4-3 Displaying and Resetting of Maximum and Minimum Values
- 4-3-1 Displaying Maximum and Minimum Values
- 4-3-2 Resetting Maximum and Minimum Values
- 4-4 External Input Signals
- 4-4-1 Forced-zero
- 4-4-2 RESET
- 4-4-3 HOLD

SECTION 5

Useful Functions

- 5-1 Teaching Function
- 5-1-1 Set Value
- 5-1-2 Scaling Value
- 5-1-3 Linear Output Range
- 5-2 Output Test
- 5-3 Maintenance Mode
- 5-3-1 Maintenance Mode
- 5-3-2 Initialization
- 5-3-3 Field Calibration
- 5-3-4 Reference Input Signal

SECTION 6

BCD Output

- 6-1 Connectors

TABLE OF CONTENTS

6-2 Timing Charts

SECTION 7

Troubleshooting

7-1 Items to Be Checked First

7-2 Display

7-2-1 Flashing

7-2-2 Error Message

Appendices

A Specifications

B List of Settings

C Available Models

D Available Parameters

E Setting Examples

Revision History